

# CLINICORE

## Collection Instructions for SARS-CoV-2 Testing via Saliva

1. Utilizing the 5 ml capped tube provided into the kit, the patients needs to collect 1 ml minimum of saliva. There are graduated volume notations on the side of the tube.



2. Once the volume of saliva has surpassed 1 ml, remove the smaller pop top tube containing the viral transport media - open and pour into the saliva.



3. Properly recap the 5 ml tube and label with patient name and date of birth.
4. Discard of the empty Viral Transport Media tube in any trash receptacle, place the labeled patient sample into the provided bio-hazard bag along with documented order/requisition.


# CLINICORE

## Collection Instructions for SARS-CoV-2 Testing via Saliva

1. Utilizing the 5 ml capped tube provided into the kit, the patients needs to collect 1 ml minimum of saliva. There are graduated volume notations on the side of the tube.



2. Once the volume of saliva has surpassed 1 ml, remove the smaller pop top tube containing the viral transport media - open and pour into the saliva.

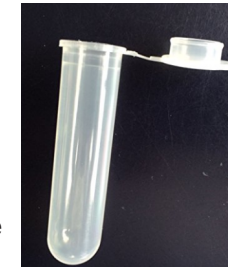

3. Properly recap the 5 ml tube and label with patient name and date of birth.
4. Discard of the empty Viral Transport Media tube in any trash receptacle, place the labeled patient sample into the provided bio-hazard bag along with documented order/requisition.

### PACKAGING

1. Place the specimen in the bio-hazard bag.
2. Fold the requisition form and copy of the patient face sheet (if applicable) in the front pouch of the bio-hazard bag.
3. Seal the bio-hazard bag shut.
4. Drop off package at your Doctor's facility or at a local FedEx Express.

**CLINICORE LABS**

800 N Causeway Blvd., Suite 300  
Mandeville, LA 70448

For Assistance Call 985-869-5163

### PACKAGING

1. Place the specimen in the bio-hazard bag.
2. Fold the requisition form and copy of the patient face sheet (if applicable) in the front pouch of the bio-hazard bag.
3. Seal the bio-hazard bag shut.
4. Drop off package at your Doctor's facility or at a local FedEx Express.

**CLINICORE LABS**

800 N Causeway Blvd., Suite 300  
Mandeville, LA 70448

For Assistance Call 985-869-5163